




## GUIDE D'UTILISATION SK-1000

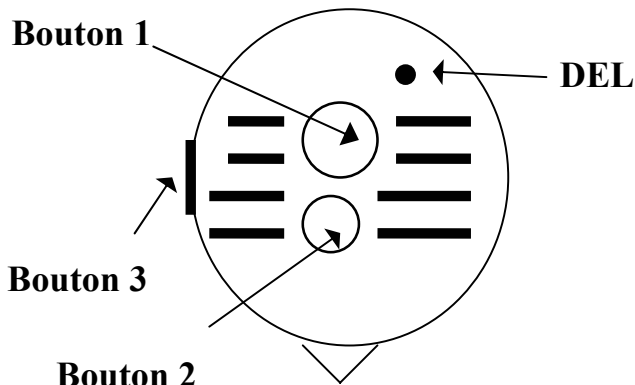

**Bouton 1** -A/ Presser pour armer.  
-B/ Presser 2 secondes pour « panique »  
(Presser à nouveau pour arrêter).  
-C/ Presser lorsque le système est armé pour localiser  
le véhicule.

**Bouton 2** -A/ Presser pour désarmer.  
-B/ Presser 2 secondes lorsque le moteur est en marche  
pour mettre ou enlever le mode valet.

**Bouton 1 et 2 simultanément** -/ Ouverture du coffre arrière (option)

**Bouton 3** -/ Utilisation future

### Pour désarmer le système par l'interrupteur:

Ignition à « on ».

Appuyer une fois sur l'interrupteur.

Attendre au moins 3 secondes.

Le système est maintenant désarmé.

**OPTIONS:** Cocher si l'option est installée

**Verrouillage / déverrouillage des portières**


**Ouverture de valise télécommandée**

**Alarme / klaxon**





## SK-1000 USER GUIDE

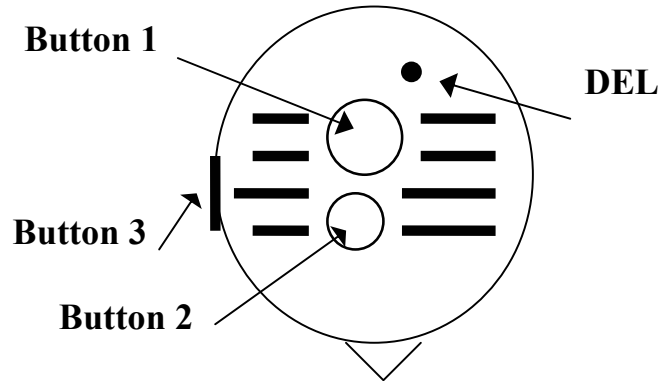

**Button 1** -A/ Press to arm.  
-B/ Press 2 seconds for « panic »  
(press again to stop).  
-C/ Press when system is armed to locate the vehicle.

**Button 2** -A/ Press to disarm.  
-B/ Press 2 seconds when the engine is running to  
to enter or remove valet mode.

**Button 1 and 2 simultaneously** / Trunk release optional.

**Button 3** / For future use.

### To disarm the system by the switch:

Ignition at « on ».  
Press switch once.  
Wait at least 3 seconds.  
The system is now disarmed.

**OPTIONS:** Indicate if installed.

**Door lock / unlock**  
**Remote trunk release**  
**Alarm**

